

SAFETY WARNINGS

1. Warning for vulnerable consumer groups: This product is not recommended for minors, pregnant or breastfeeding women, or anyone at risk of heart disease, depression, and asthma.

2. Battery Caution: Do not expose the device to extreme temperatures. Do not disassemble the device without Lost Vape's recommendation.


3. Pod Cartridge Attention: Do not dry burn the tank or coil. It is essential to prime a new coil. Simply fill your tank with e-liquid and leave it to stand for at least 5 minutes before vaping. As above, this will allow the cotton inside your new coil to absorb plenty of e-liquid ready for that first, tasty vape. All cartridges/coils are not covered under warranty once they are opened, used, or filled with liquids.

4. Warranty: The device is covered by a 3-month warranty from the date of purchase.

5. Contacts: For further questions or inquiries, please contact Lost Vape by email at support@lostvape.com or visit our website: www.lostvape.com.

PRODUCT DESCRIPTION

● COMPONENTS OVERVIEW

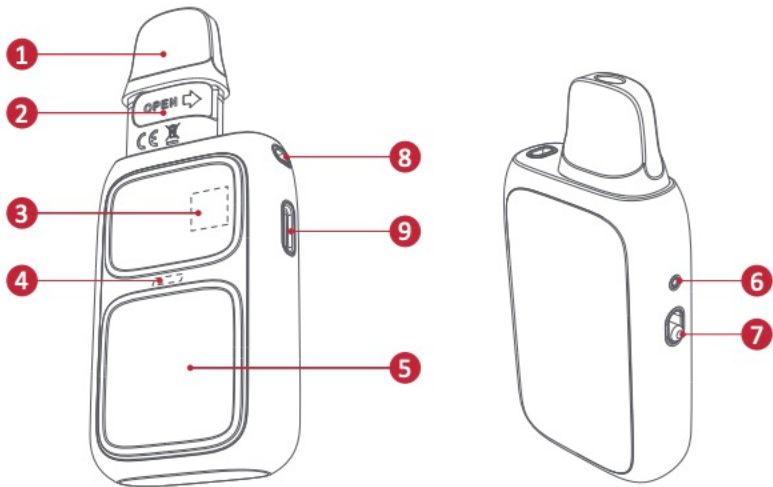

① Pod	⑤ Built-in 1000mAh Battery
② E-liquid Refilling Plug	⑥ Air Inlet
③ 0.42-inch OLED Display	⑦ Airflow Control Button
④ LED Indicator	⑧ Lanyard Hole
	⑨ Type-C Port

● BASIC PARAMETERS

Dimension:	67.2*44.4*19.60mm
Net Weight:	63g±3g
Pod Capacity:	2.5ml/2ml
Battery Capacity:	1000mAh (built-in)
Battery Voltage:	3.3V-4.2V
Power Range:	17W-25W
Charging Voltage:	5V/1A
Type-C Cable:	Support 5V/2A Charger
Body Material:	Plastic + Silicone

BASIC OPERATION

● FILL WITH E-LIQUID



1. Take out the pod



2. Open the e-liquid refilling plug



3. Refill the pod from the filling slot



4. Seal the plug after filling



5. Put the pod back into the device

● PUFF TIME / PUFF COUNT

1) Puff Time will display after every vaping.


2) The peak display of puff count is 9999. Plug in and out the pod 3 times within 3s to reset the puff count.



① Power Value	② Battery Level
③ Coil Resistance/Puff Time	④ Puff Count

● CHARGING INDICATION

Vaping is allowed while charging at power-on state. When charging, the screen will be displayed as follows:

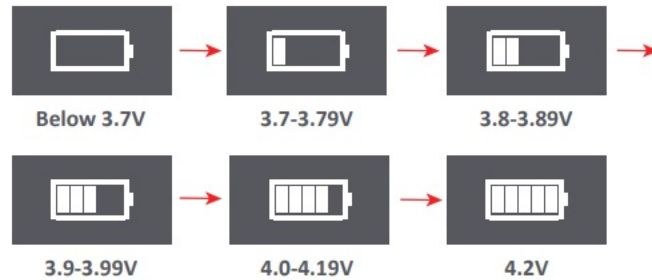

WARNING DESCRIPTION

Low Battery: When the battery voltage is lower than 3.3V before using, or lower than 2.85V while vaping, LED indicator will flash red 3 times and output will automatically cut off.

Open Circuit: When open-circuit occurs or the resistance is greater than 2 Ω, LED indicator will flash purple 3 times, the resistance value displays "0.0", and no power output.

Short Circuit: When short-circuit occurs, LED indicator will flash red 8 times, the resistance will display the actual value and no power output.

Over 10s: When you vape over 10s continuously, LED indicator will flash purple 8 times and the output will be automatically cut off.